

11" /



To Dream For

Step 1: Do you have the right template?


Step 2: Have you printed the template to the correct scale? To confirm, check the measurements on this template.

Step 3: Cut out the template.

Step 4: Use this template to mark and cut the sink hole in your counter.

FRONT

280mm

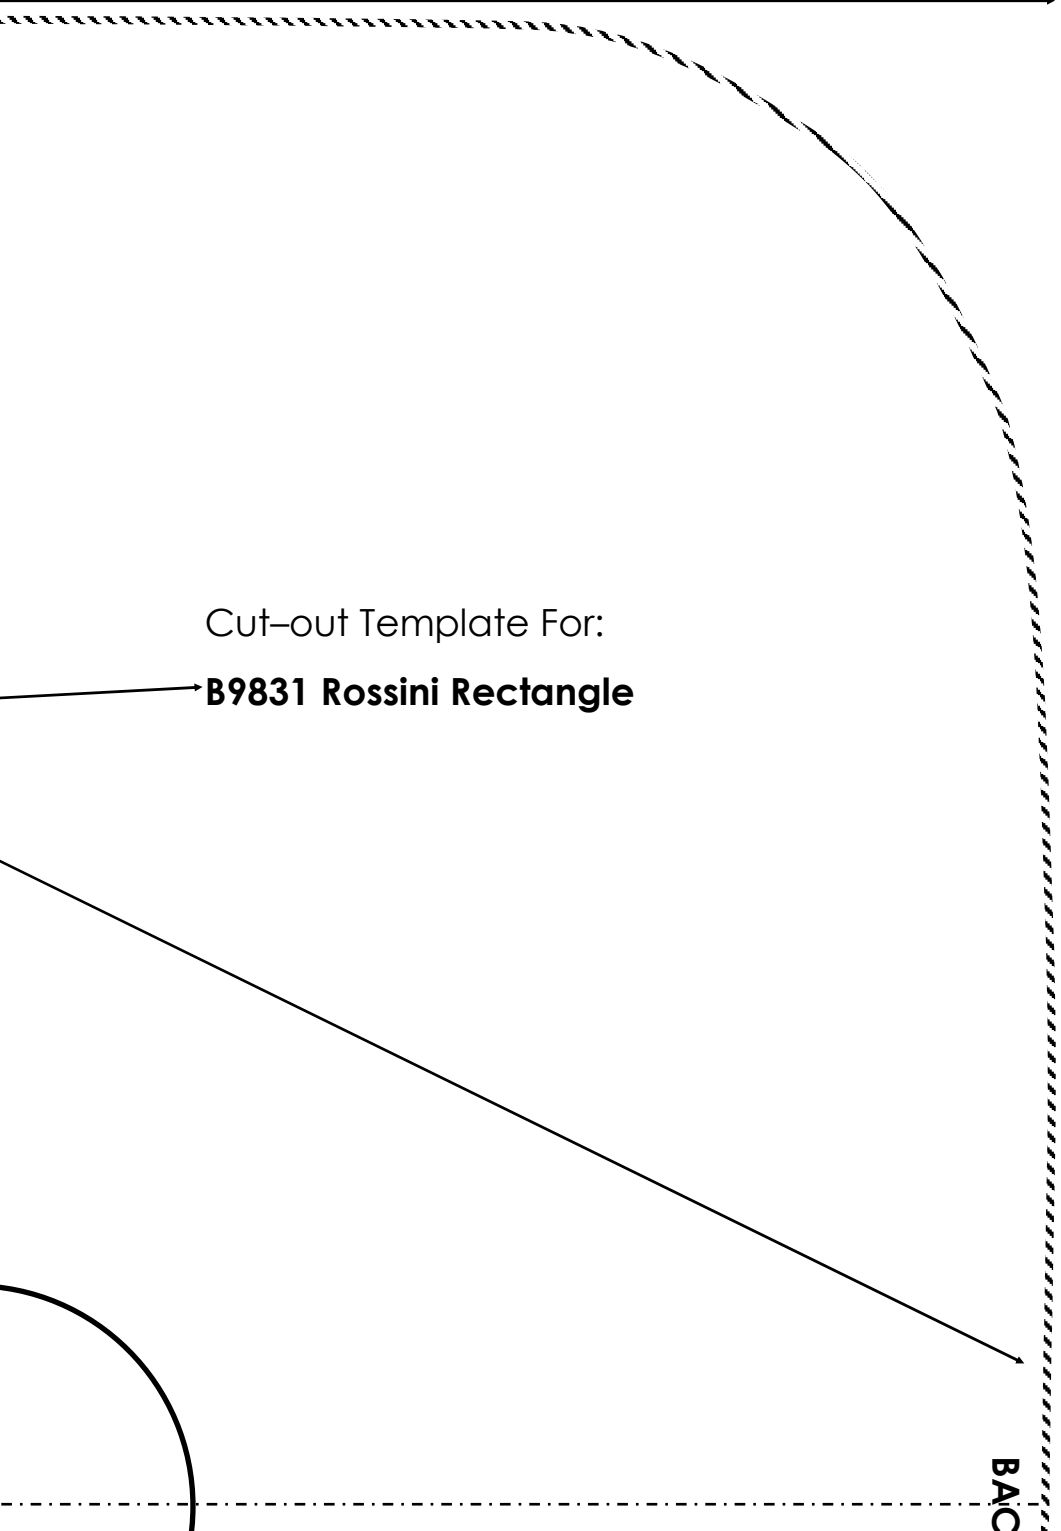

Cut-out Template For:

B9831 Rossini Rectangle


15 3/4" /

BACCI


F

SCALE 1:1

(Print on 4 sheets of 8.5"x11" Paper)

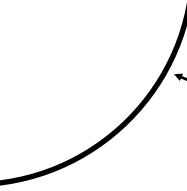

Drain

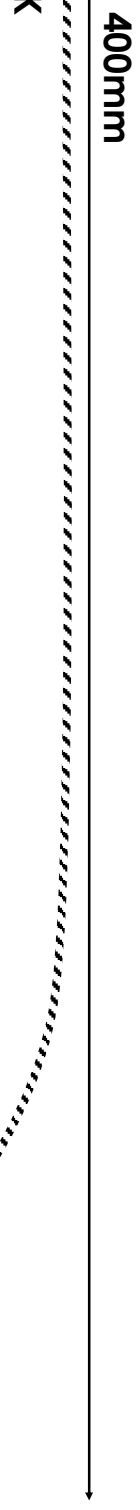

Have questions?

Contact us:

877-757-8930

cs@icobath.com

www.icobath.com